


Werktafel Douglas met opbergruimte

100x52x132 [cm]

Art. 1015317

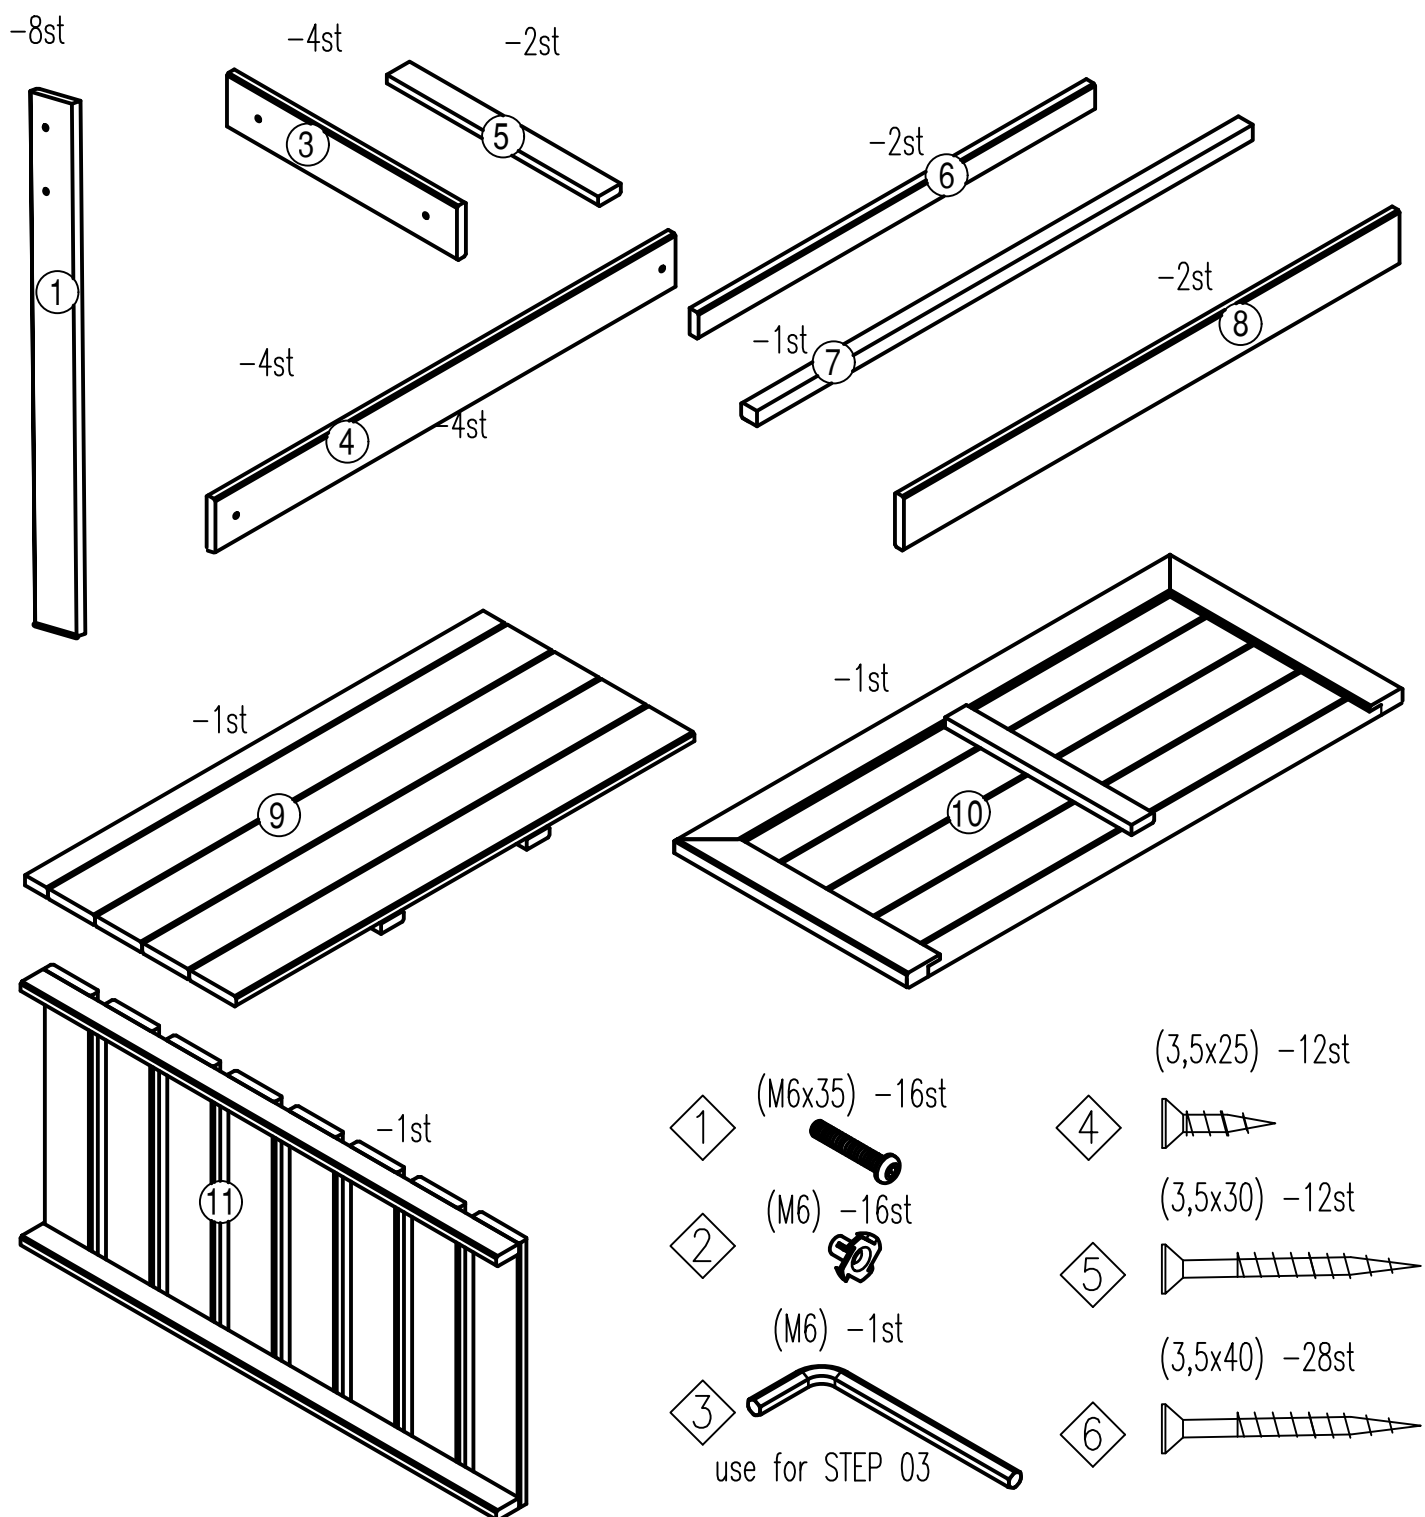

(S) Vi rekommenderar förborring av skruvhålen!

(NL) Voor alle schroeven adviseren wij de gaten voor te boren!


(D) Vor dem Schraubeneindrehen soll man die Löcher boren!

(UK) For all screws we advise to pre-bore the holes!

(F) Pour toutes les vis nous vous recommandons de percer des trous!


step 01

Choose 4 board from 8, and make three holes in each of them

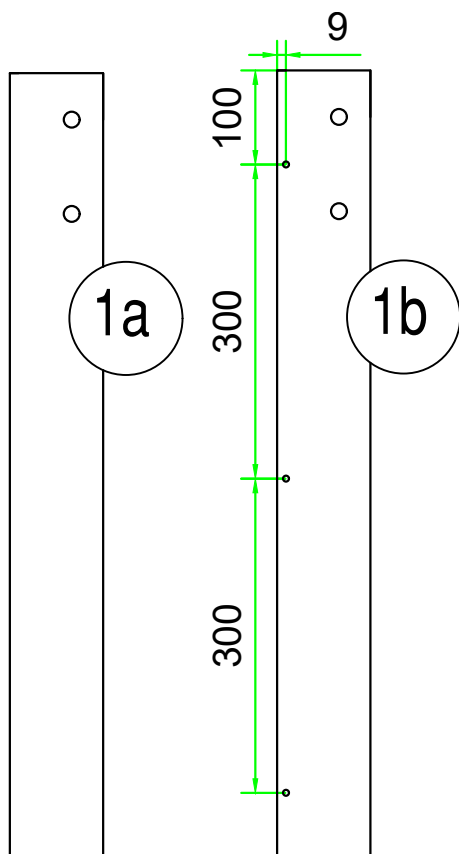



step 02

2x

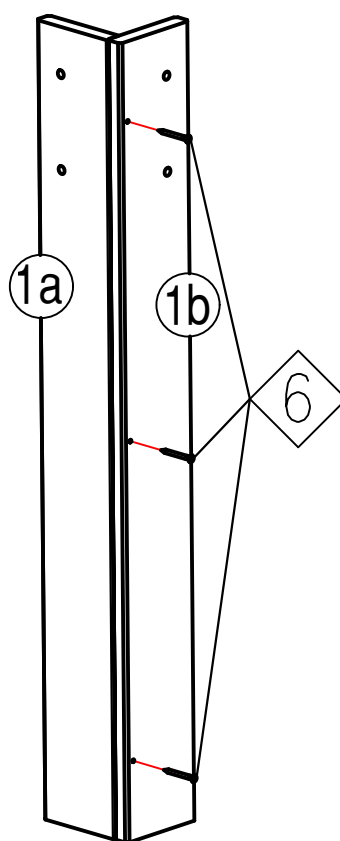


2x


(2/6)

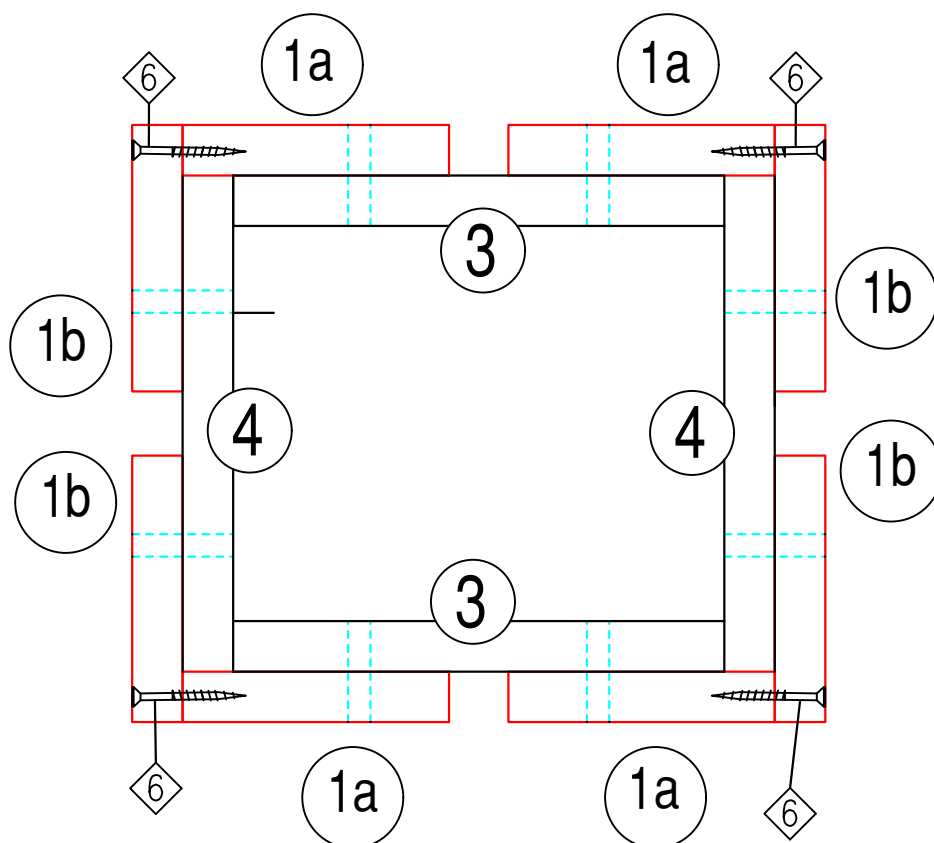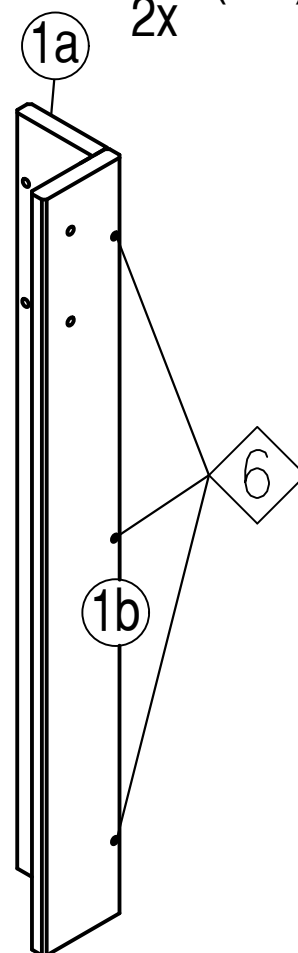


step 03

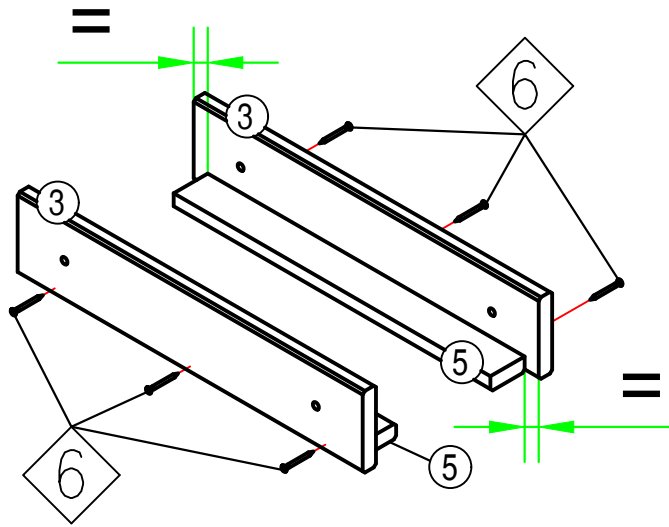


step 04

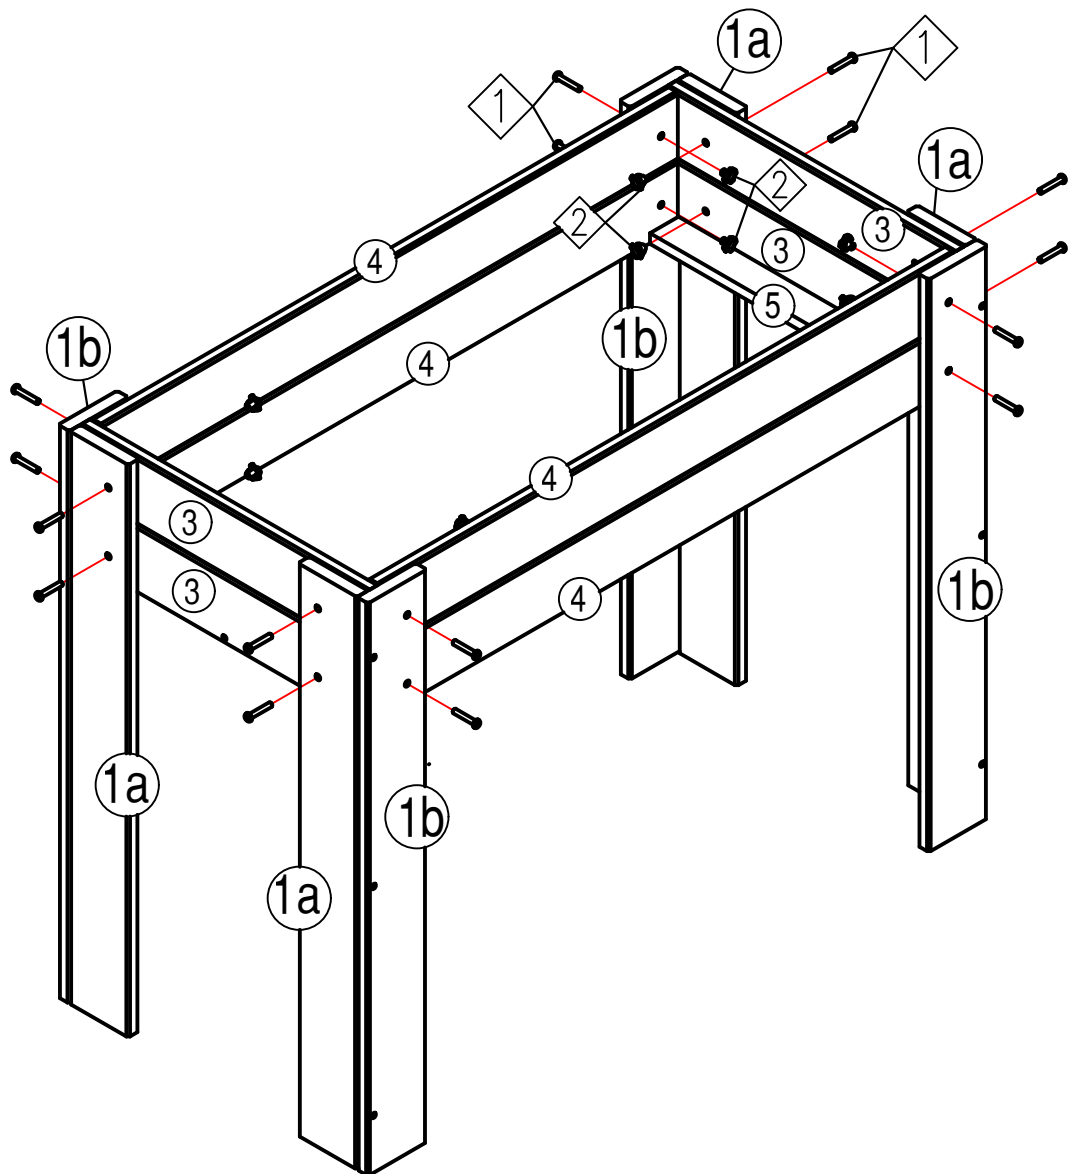


step 05

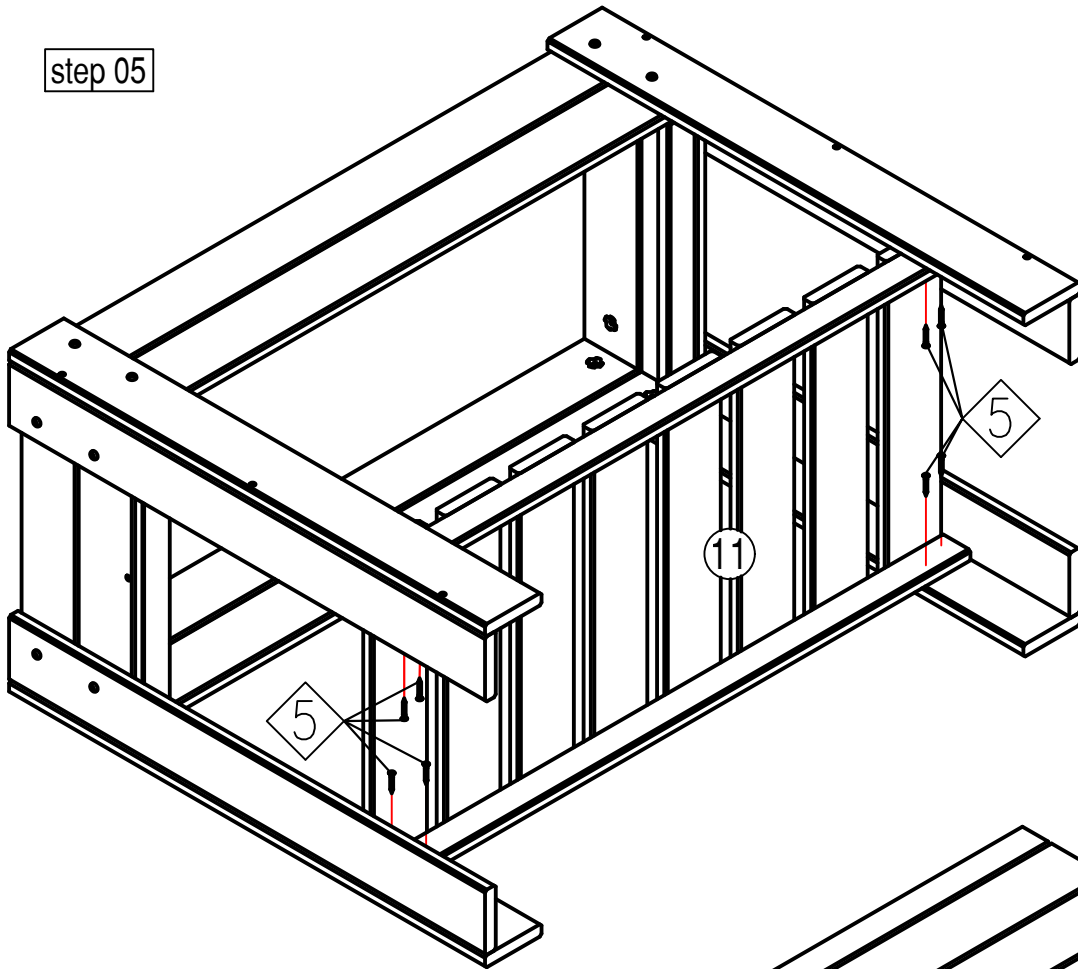

step 06

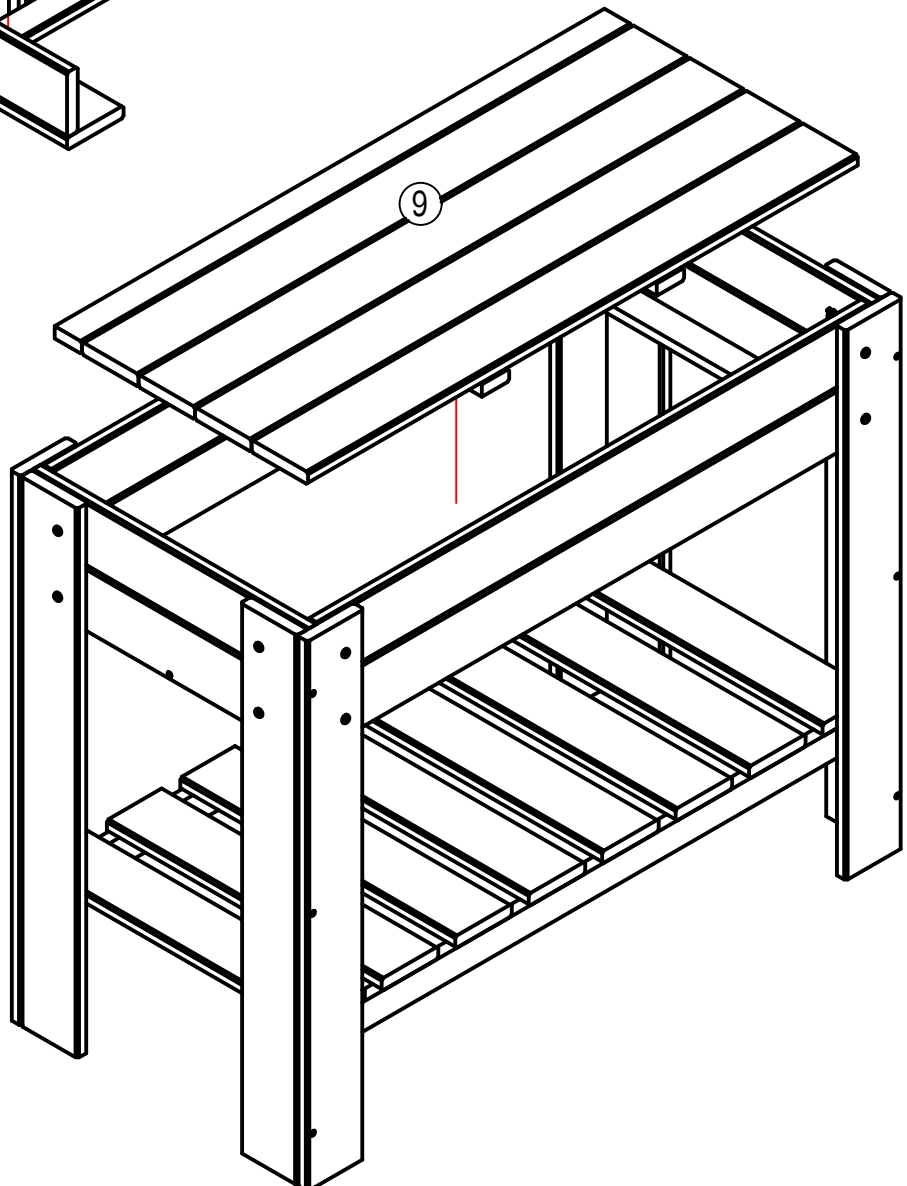


step 07

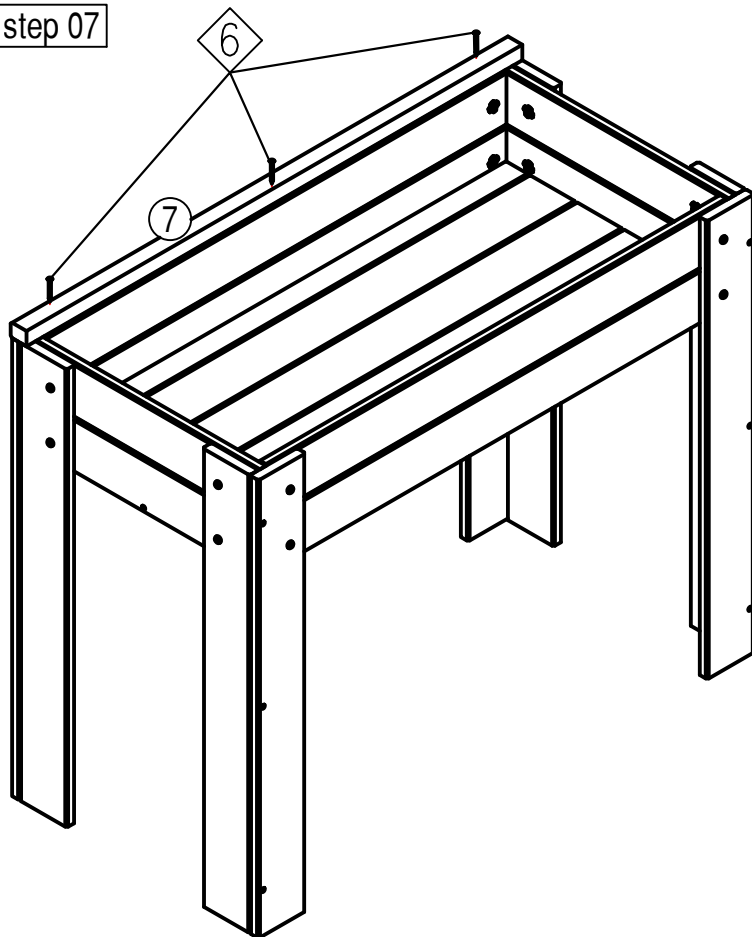

step 08

(5/6)

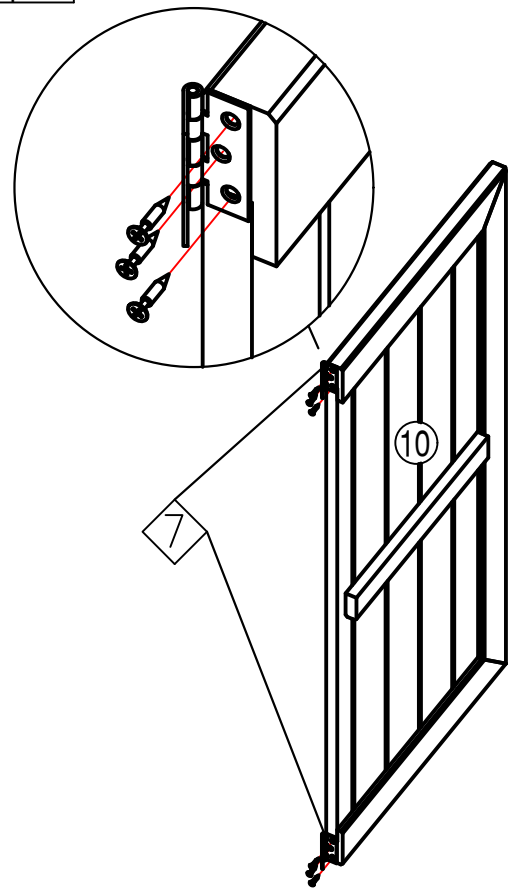

step 09

