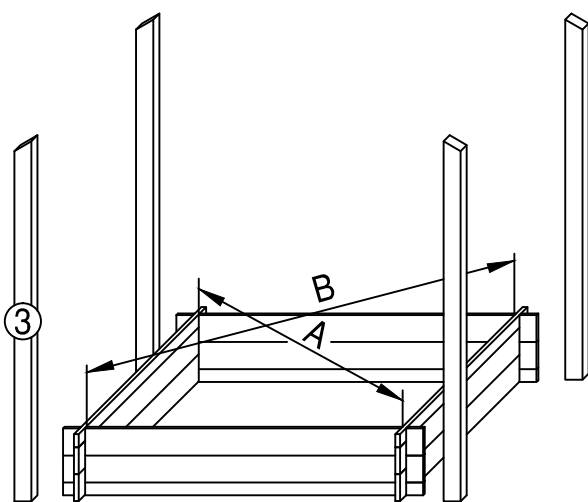
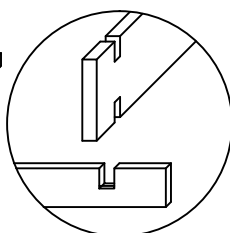
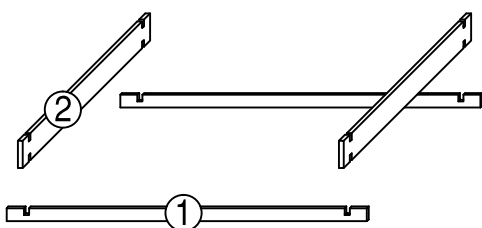


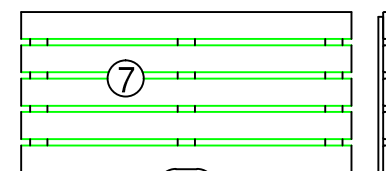
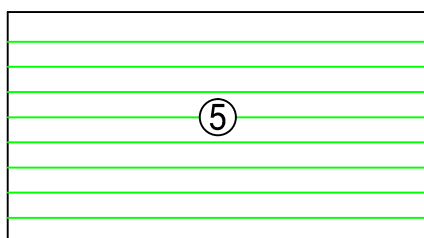


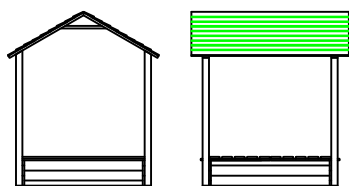


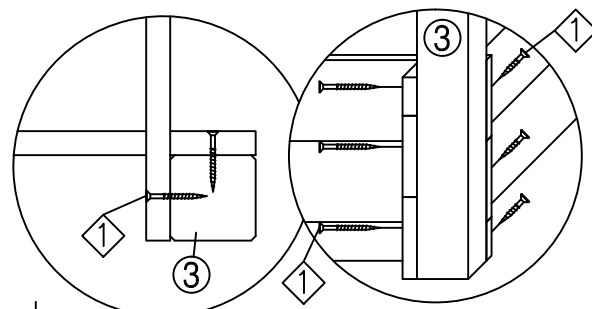
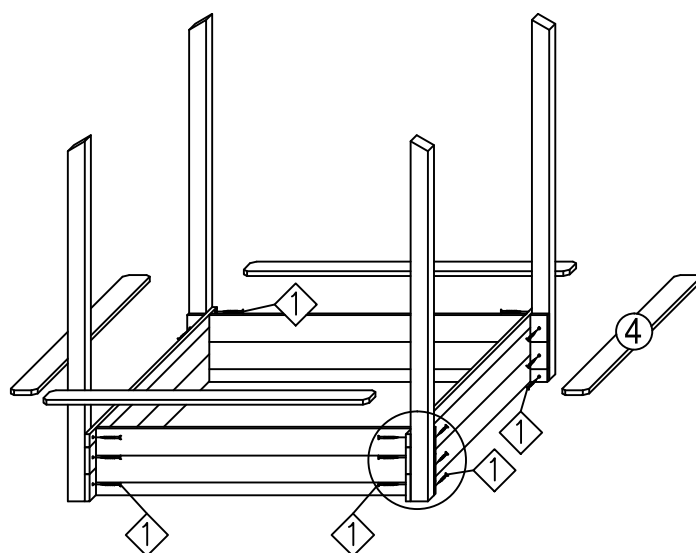
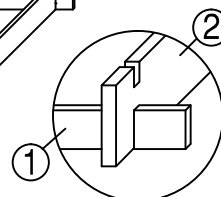
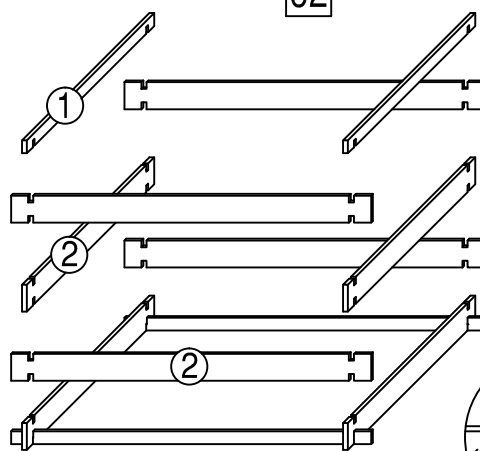


(PLP 000443)


$$A=B$$


⑤ Vi rekommenderar förborming av skruvhalen!



(NL) Voor alle schroeven adviseren wij de gaten voor te boren!

(D) Vor dem Schraubeneindreihen soll man die Löcher boren!


Ⓢ For all screws we advise to pre-bore the holes!

(F) Pour toutes les vis nous vous recommandons de percer des trous!



05

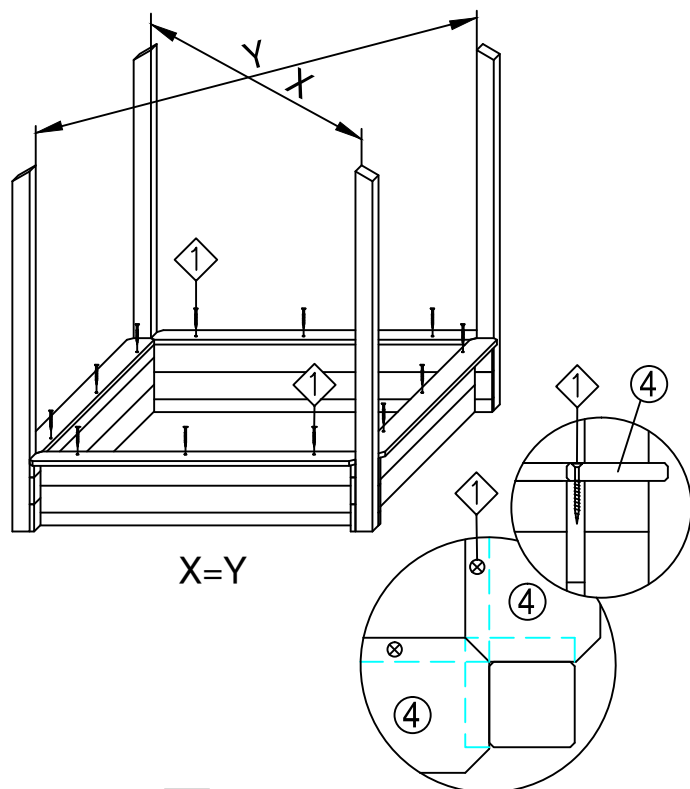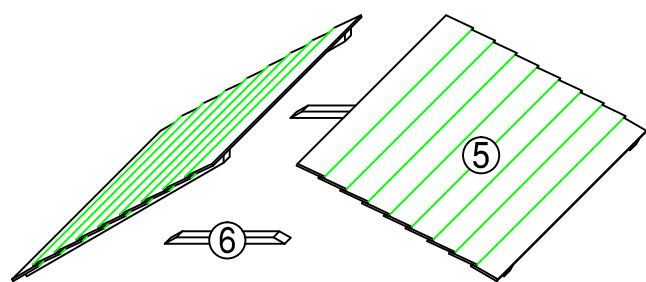

07

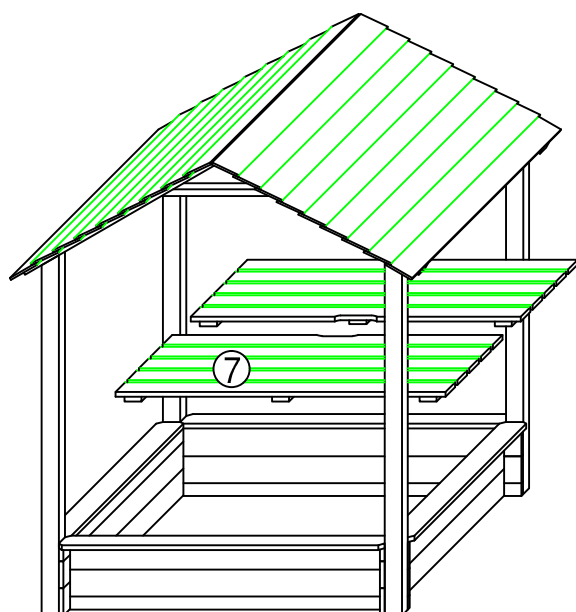

06

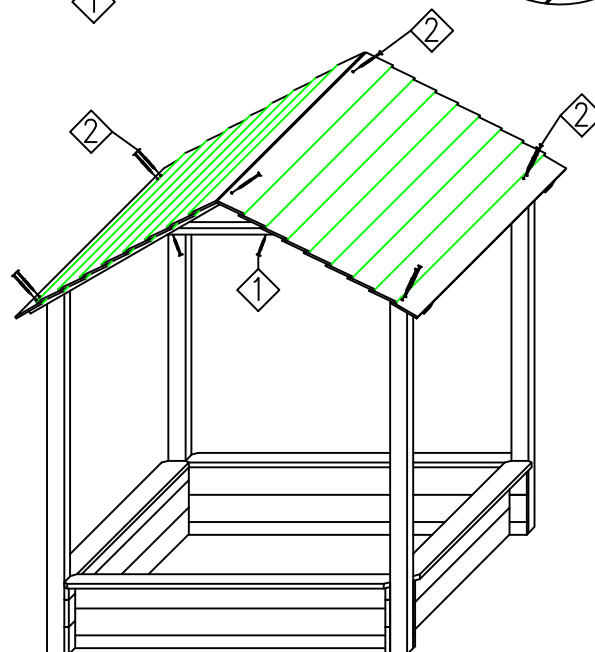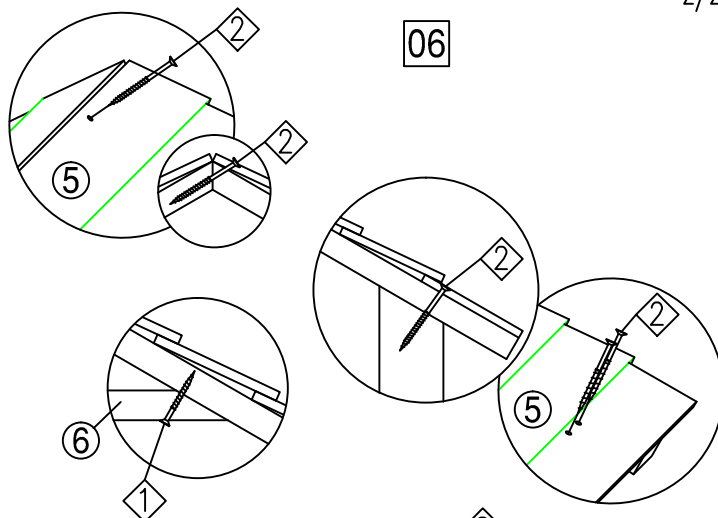

08

